

# Solution of The Audio Board Looseness of PAW120/150

Infomedia 2007-4-4

1. Open the case and get the machine out of the pocket.
2. Unscrew the four screws from the back cover, and put them in a safe place. **See picture 2.**



3. Unscrew the two screws from the topside board, and put them in a safe place. **See picture 3.**




4. Disconnect this board from the edge near the battery box. Get the board out of the machine and put it in a safe



place. **See picture 4.**

5. Now you can see the audio board in front of you. Press the area showed in

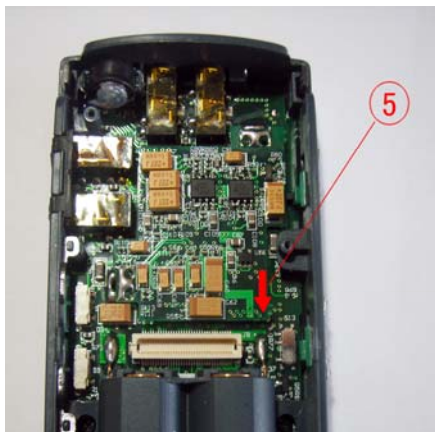

picture 5. If you can hear a gently “ka”, that means the audio board is loose. See picture 5.

6. Fasten the board by pressing. Then, fix the topside board you just removed, screw and screw the back cover.
7. Install the batteries, turn on the machine and push the “record “button. Check up whether or not the machine correctly works.

## Notice:

1. Don't use too much strength when pressing the boards, for the boards may be broken by doing so.
2. After fastening the audio board, if the machine still doesn't correctly work, please contact **xxx** for further repair in the manufactory.